



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	497,5
	A2	498,5
	A3	498,7
	A4	498,8
CENTER	A5	498,9

OUTSIDE	B1	488,2
	B2	505,9
	B3	506,0
	B4	506,1
CENTER	B5	506,1


OUTSIDE	C1	484,4
	C2	524,5
	C3	525,8
	C4	526,3
CENTER	C5	526,8

OUTSIDE	D1	487,8
	D2	551,0
	D3	554,4
	D4	555,6
CENTER	D5	556,8

		Standard (6&2)
[X] UPPER STEERING LINES	1	149,2
	2	149,2
	3	173,4
	4	158,9
	5	149,2
	6	149,2
	7	158,9
	8	173,4
[Y] LOWER STEERING LINE		434,7
[Z] LOWER STEERING LINE		452,9

CANOPY	TX2
SIZE	365

Double Command Standard (6 & 2)

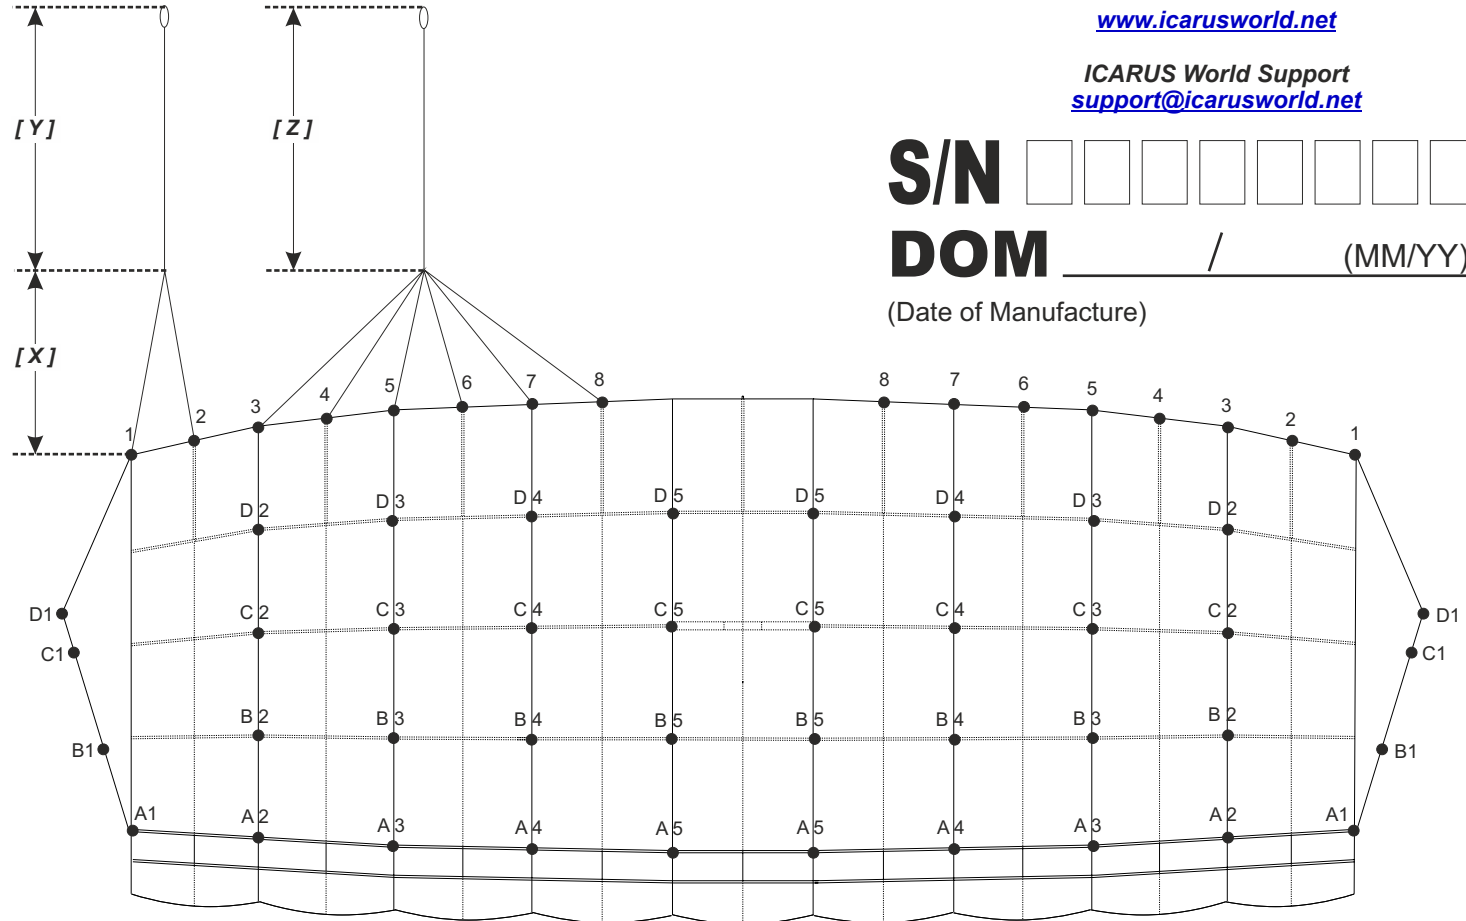

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.



www.icarusworld.net


ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Single Brake Line

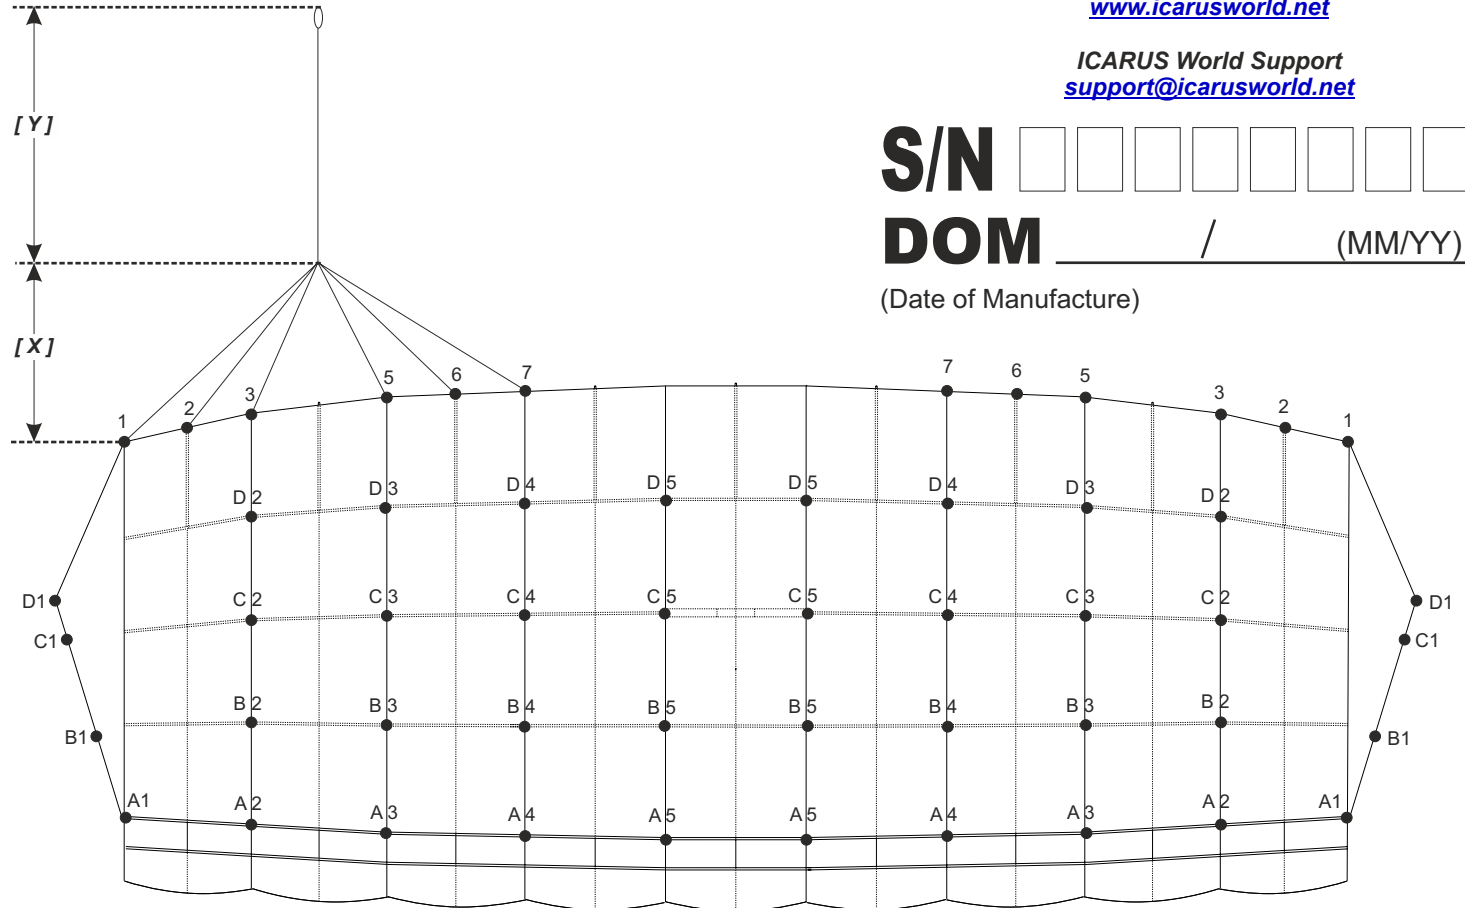

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.

Final Measurements (cm)

OUTSIDE	A1	497,5
	A2	498,5
	A3	498,7
	A4	498,8
CENTER	A5	498,9

OUTSIDE	B1	488,2
	B2	505,9
	B3	506,0
	B4	506,1
CENTER	B5	506,1

OUTSIDE	C1	484,4
	C2	524,5
	C3	525,8
	C4	526,3
CENTER	C5	526,8

OUTSIDE	D1	487,8
	D2	551,0
	D3	554,4
	D4	555,6
CENTER	D5	556,8

		Single Brake Line
[X] UPPER STEERING LINES	1	173,4
	2	158,9
	3	149,2
	4	x
	5	149,2
	6	158,9
	7	173,4
	8	x
[Y] LOWER STEERING LINE		452,9

CANOPY	TX2
SIZE	365